

fastwarm[®]



10 ZONE WIRING CENTRE

DATA SHEET



Fastwarm[®] 10 Zone Wiring Centre are for use with 230v thermostats, to control any 230v normal closed thermal actuator for multi zone control.

Fastwarm[®] 10 Zone Wiring Centre offers a volt free terminal to operate the heat source such as boilers and heat pumps. Additional outputs designed for use with underfloor heating systems are also included such as 230v terminals for the underfloor pump and underfloor heating motorized valve.

Zone 10 can be used as an isolated radiator zone, by using the UFH/RAD switch. If the switch is set to RAD; When Zone10 calls for heat this will provide an output to a radiator zone valve and the boiler, but WILL NOT enable the under-floor heating pump/valve output. If the switch is set to UFH; When Zone 10 calls for heat, this will act as an underfloor heating zone, by enabling the actuator, boiler and pump/valve outputs. Any output which is not needed can be ignored.

Technical Details

Number of Heating Zones	10 (Zone 10 can be used for Radiators)
Number of Hot Water Zones	0
LED Indication	Yes
Fixing Method	Wall Mounting or DIN Rail Mounted
Supply	230v AC 1 Phase
Total Load	5A
IP Rating	IP20
Product Dimension (LxHxD mm)	320 x 140 x 55

