

fastwarmTM

SMART UNDERFLOOR HEATING

Classic Underlay

For Wood & Laminate Floors

6mm thick

3-Way Insulation

Warmer

Keeps cold out & warmth in. 2 Tog



Quieter

Absorbs noise by 20dB



Drier

Non-absorbing



Levels & Supports

Smooths

Levels minor subfloor imperfections



Supports

and braces board joints



Resilient

Withstands high loads < 10T/m²



Durable

Mould resistant



Easy to Install

Lightweight

and easy to cut with a knife



Installation in brief

- Floor should be clean, dry & dust-free.
- Secure loose floorboards and hammer in any protruding nails.
- Lay dry boards in staggered pattern, leaving 5mm gap at room edges.
- Damp-proof membrane to be applied first on damp floors, in cellars & ground floor above unheated rooms.
- Full instructions on back of label.

20 boards (60 x 85.6cm each)
= **10.2m²** area coverage

Go online at
www.fastwarm.com

 **MADE IN BRITAIN**



Recyclable
Foam Material



Classic Underlay

For Wood & Laminate Floors

6mm thick


fastwarmTM
SMART UNDERFLOOR HEATING

Classic Underlay

Surface Preparation


- Ensure the floor is clean, dry and dust-free.
- Any loose floorboards and protruding nails should be hammered down.
- If the floor is damp, it must be isolated using a vapour tight polythene damp proof membrane.
- A membrane must always be applied in cellars or on ground floors above unheated rooms.

Laying Instructions

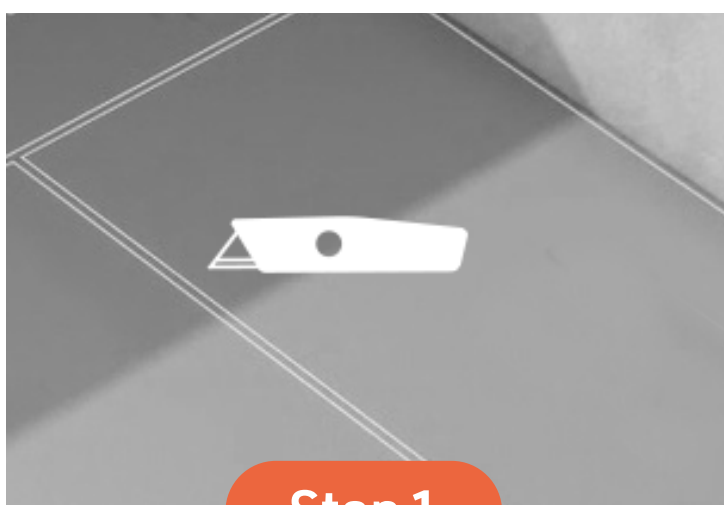


Step 1

The underlay boards can be easily cut using a knife.

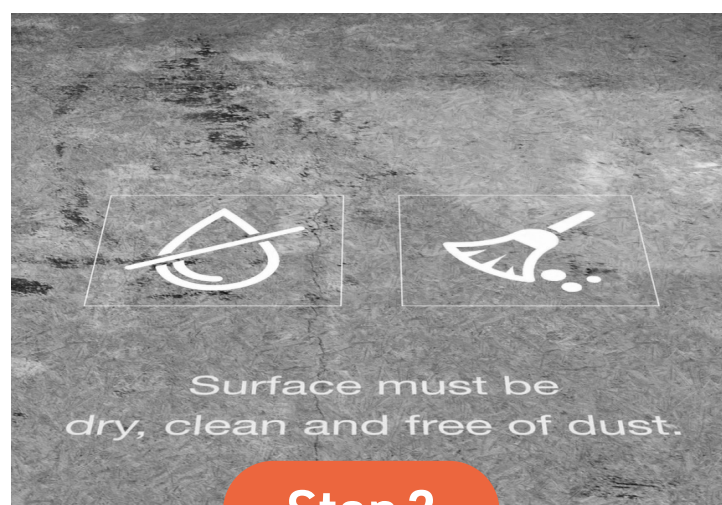


Step 2

The boards must be kept dry.

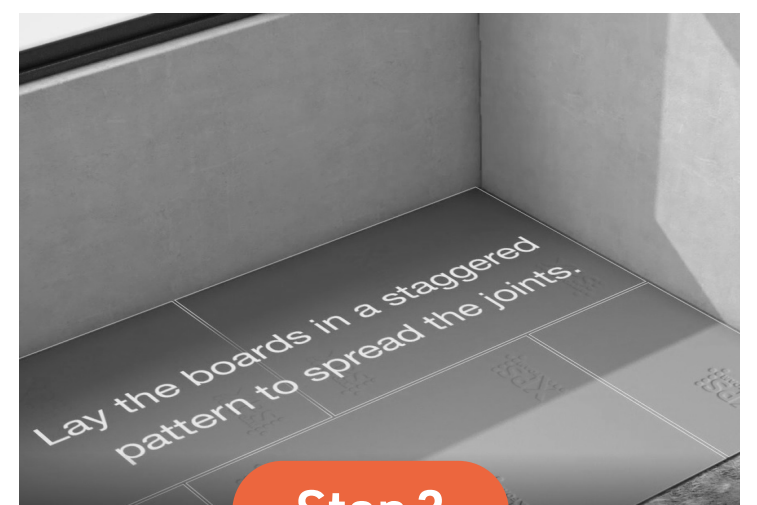


Step 3

Lay the boards in a staggered pattern to spread the joints.

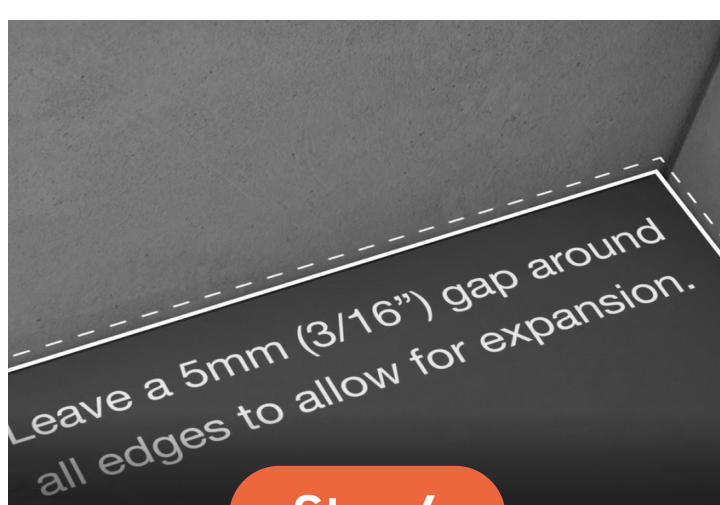

Step 4

Leave a 5mm gap around the edge of the room.

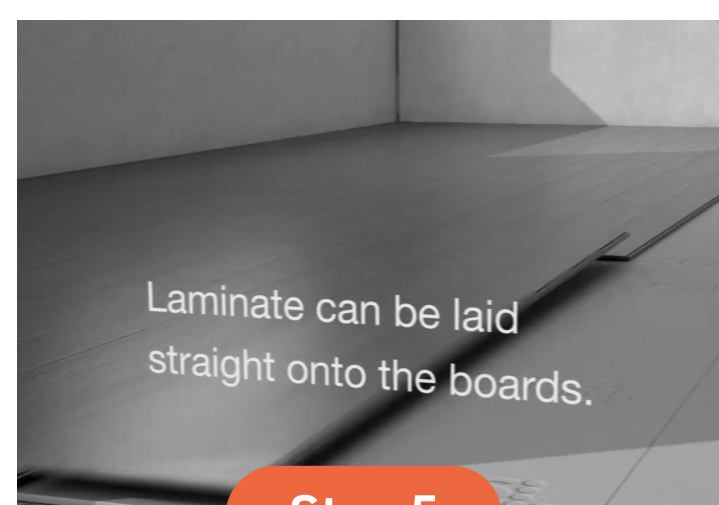

Step 5

Always lay final floor covering as directed by the manufacturer.