



INSULATION BOARDS

INSTALLATION INSTRUCTIONS

- ✓ Outstanding Thermal Insulation
- ✓ Excellent Levelling Properties
- ✓ Compression Strength
- ✓ Impact Noise Reduction
- ✓ Water Resistant
- ✓ Light Weight Easy to Handle



PERFECT FOR
ELECTRIC UNDER
TILE HEATING



PERFECT FOR
ELECTRIC UNDER
WOOD HEATING



PERFECT
WETROOMS &
BATHROOMS

XP-Pro Insulation Board

Fastwarm® XP-Pro Insulation boards are specifically designed for use with our underfloor heating mat systems on concrete/screeded floors. They should not be used on timber substrate floors with a ceramic tiled finish. They offer a balance between cost and durability and are a less expensive alternative to our Tile Backer Boards.

XP-Pro Insulation Boards are also used as a high quality insulation for our underwood heating systems on any substrate floor. Available in 6mm, 10mm, 20mm, 30mm & 50mm thickness.

Classic EPS Underlay® Insulation Board

Fastwarm® economy insulation boards are specifically designed for use with our underwood heating mat systems.


These boards are the most cost effective solution for underwood systems and also act as an underlay for your wooden floor, they're available in 6mm thickness only.

Even if not used with underfloor heating these boards are the most cost effective high quality underlay for wooden floors.

Not Suitable for undertile heating.

Tile Backer Board

Fastwarm® Tile backer insulation boards are high quality extruded polystyrene panels with a mesh and a modified polymer coating on both sides, for use with our under tile heating cables and mats (not suitable for our underwood systems). Available in 6mm, 10mm, 12.5mm, 20mm, 30mm & 50mm thickness. Fastwarm® Tile Backer Boards are ideal for two primary purposes; as a superior waterproof surface to fix wall or floor tiles and as a first class heat insulation for underfloor heating systems. (When used on walls a Minimum thickness of 10mm must be used, mechanical fixing at 300mm centres required).

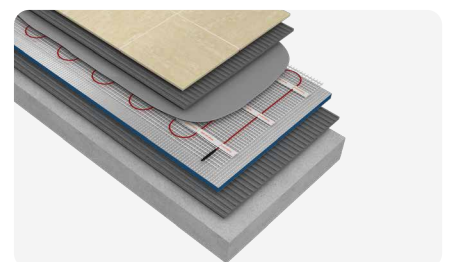

UNDERTILE MAT & CABLE SYSTEMS**Using Tile Backer & XP-Pro* Boards****Concrete / Screeded Floors**

Ensure floor surface is free of dust and debris and primed with suitable primer (in kit), prior to bonding boards in place with a good quality Flexible tile adhesive (check manufacturers guideline's). Use suitable notched floor tiling trowel to apply the adhesive to the floor and bed boards using a straight edge in a staggered brick bond fashion. For tiling either directly over tile backer boards or to embed electric underfloor heating system use a suitable Flexible Tile Adhesive. Ensure that all heating mats are fully embedded within the tile adhesive or Level it one self levelling compound.

NOTE: Do not use solvent based or pre mixed adhesives. A single part latex levelling compound may be applied to embed the heating system prior to tiling if desired.

* XP-Pro Boards can only be installed on concrete/screeded floors using a cement based tile adhesive

Priming

Please ensure all boards and floors are primed with a suitable Acrylic based primer (As per manufactures guidelines) Ensure primer is completely dry before adhering Fastwarm insulation boards to subfloor or tile/ levelling over.

Timber Floors

Ensure floor surface is free of dust and debris and primed with suitable primer (in kit), prior to bonding boards in place with a good quality Flexible tile adhesive (check manufacturers guideline's). Tile Backer Boards onto timber subfloor must also be second fixed with screws and washers at every 200mm centres. If the timber floor shows signs of movement, then you must secure the floor or reinforce the floor first prior to fixing down the insulated tile backer boards.

UNDERWOOD FOIL SYSTEM**Using Classic EPS Underlay® or XP-Pro**

When using Fastwarm Foil mat systems over any substrate floor - Fastwarm XPS or EPS insulation boards are to be laid in a staggered brick bond fashion and all joints must be taped to prevent movement whilst laying the foil heating mat/s.

